


MODULE STORAGE PANEL SHELF 2024/TOYOTA LAND CRUISER AC7703001NA

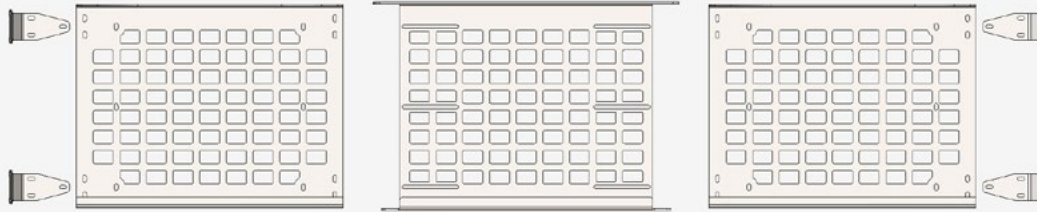

TOOLS REQUIRED

- 7/16 sockets
- 7/16 wrenches
- 5/32 Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 1 Hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571

Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle.


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE

A.

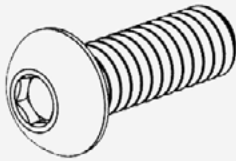

1/4-20 X 3/4" BUTTON HEAD

QTY: 36


A1.



1/4" FLAT WASHER

QTY: 54

A2.

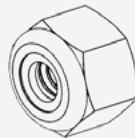

1/4-20" NYLON LOCK NUT



QTY: 36

Reference this page throughout the install





□ STEP 1

Install the mounting brackets to the Rear Window MSP's. Ensure to install 10" apart from inside the brackets with the provided (A, A1, A2) 1/4" hardware using a (5/32 allen) and a (7/16 wrench). ****You can install this shelf in the up or down positions****

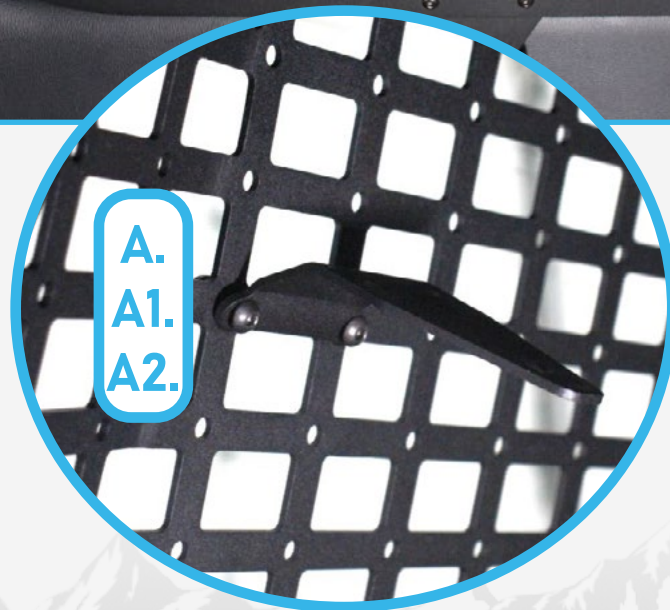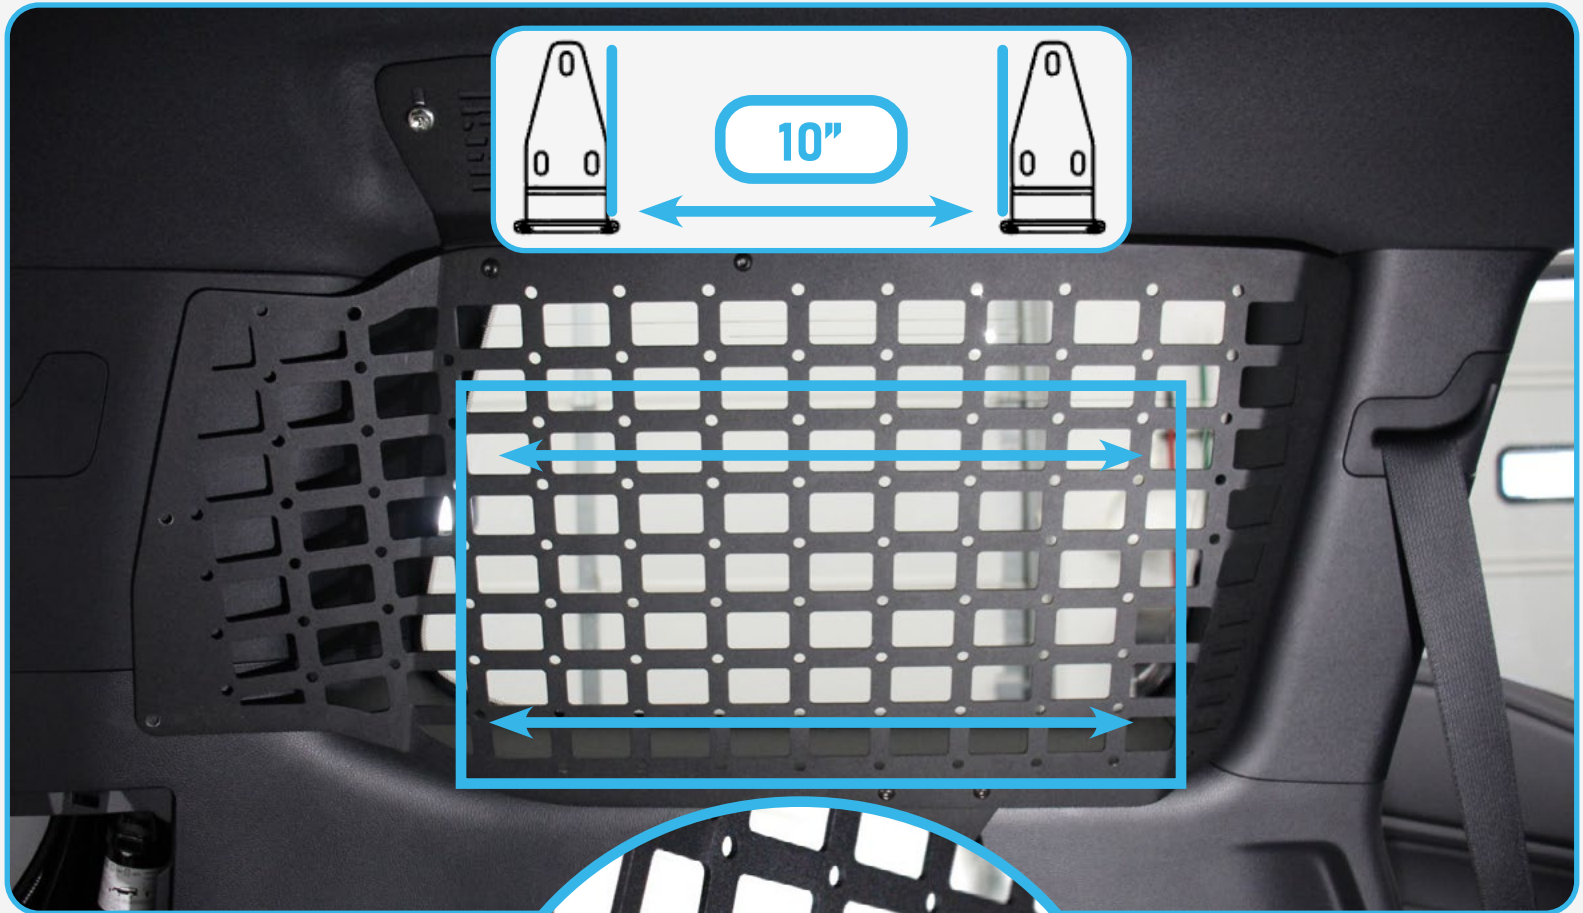



□ STEP 2

With the provided (A, A1, A2) 1/4" hardware, install the outer panels with the middle panel as shown below using a (5/32 allen) and a (7/16 wrench). ****Leave loose****

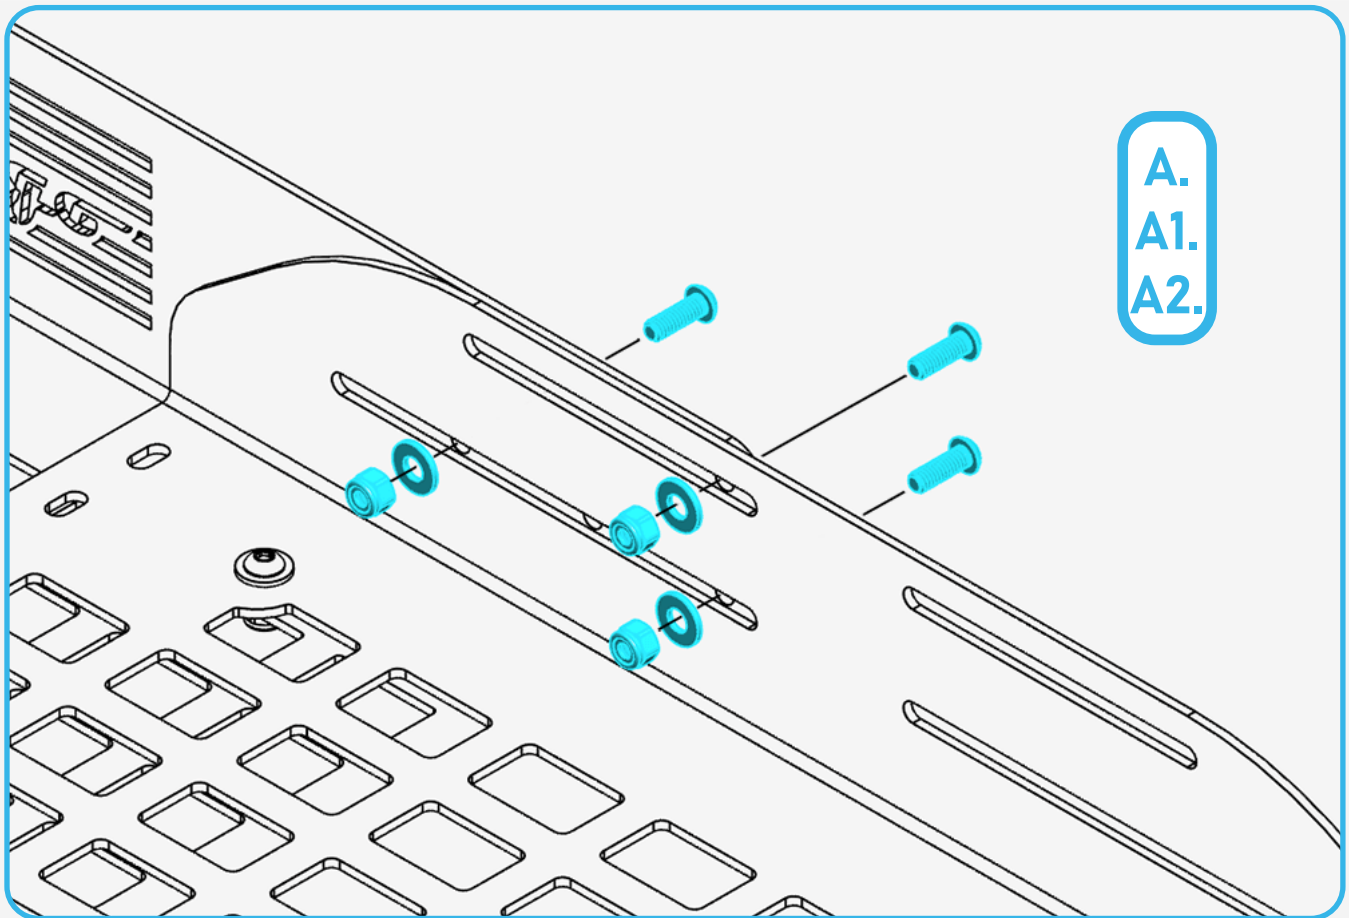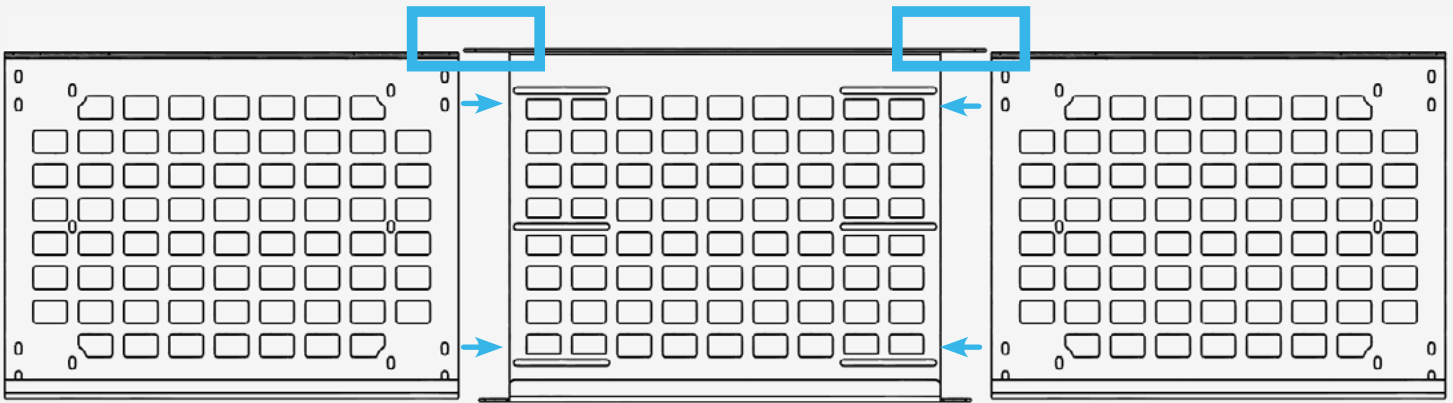



□ STEP 3

With the provided (A, A1, A2) 1/4" hardware, install the outer panels with the middle panel as shown below using a (5/32 allen) and a (7/16 wrench). ****Leave loose****

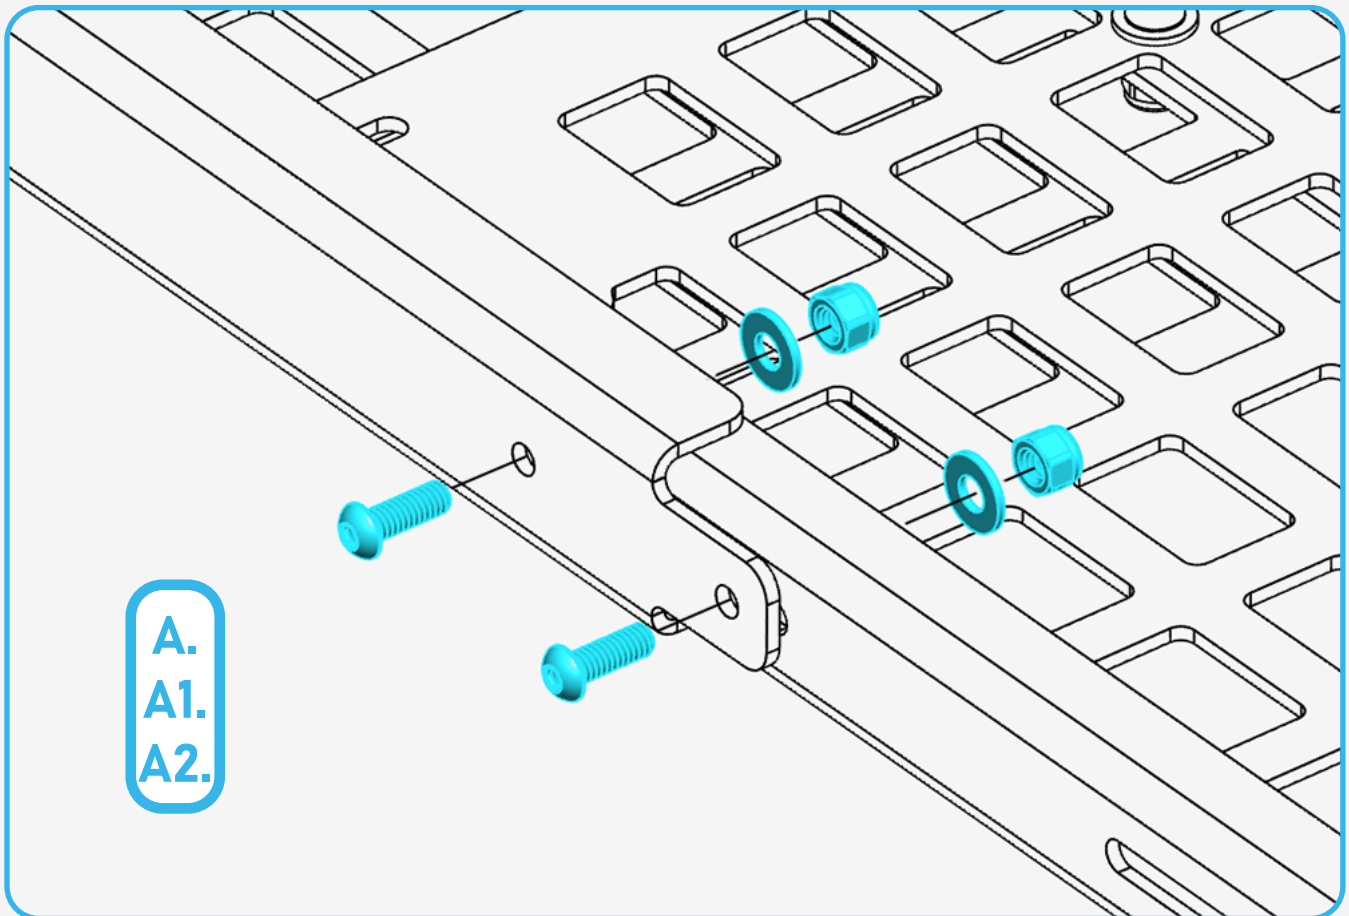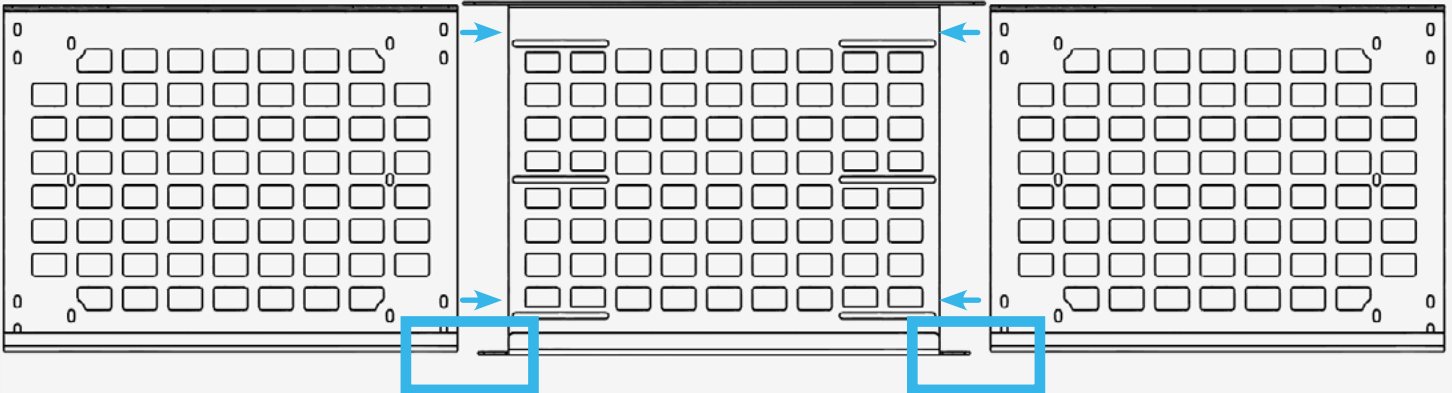


□ STEP 4

With the provided (A, A1, A2) 1/4" hardware, install the outer panels with the middle panel as shown below using a (5/32 allen) and a (7/16 wrench). ****Leave loose****

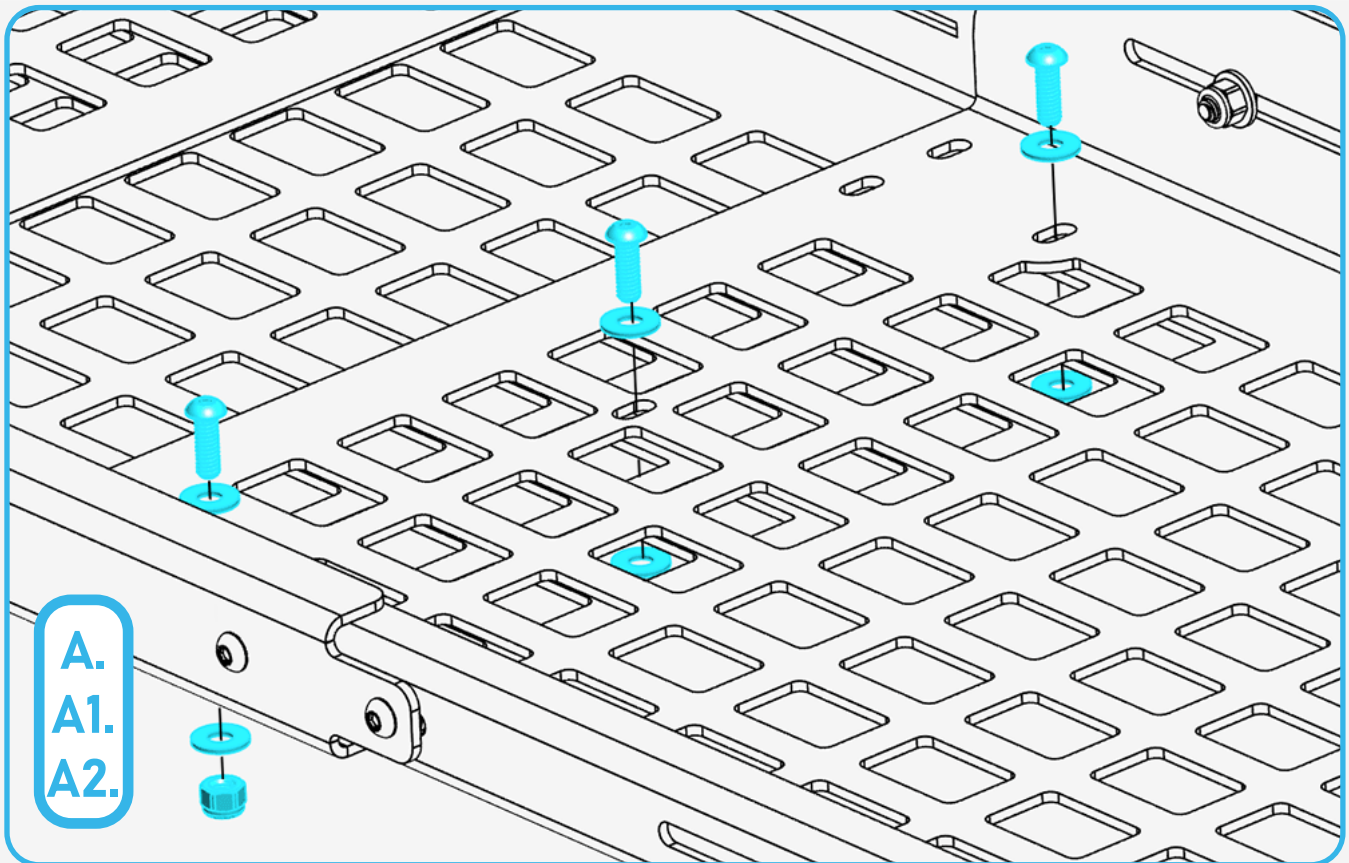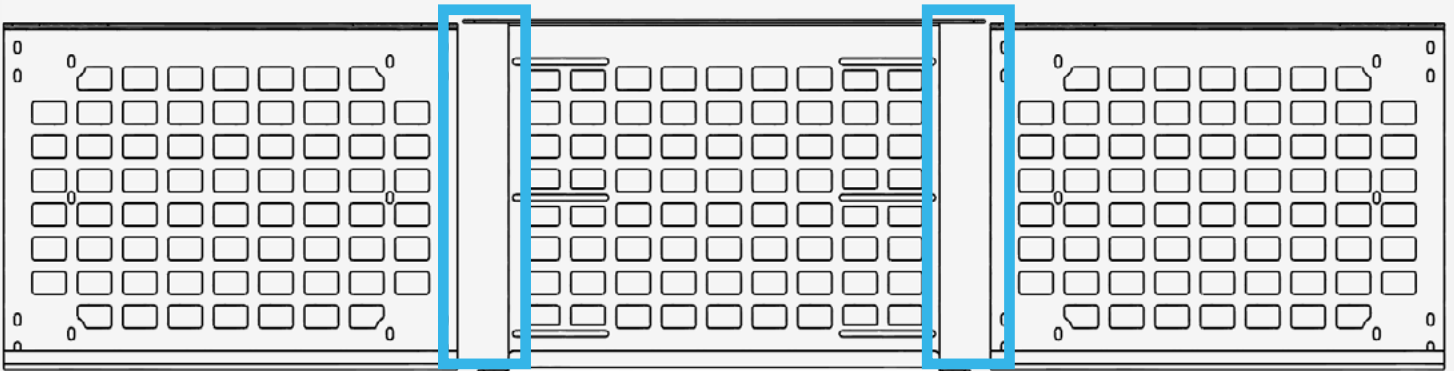



□ STEP 5

With the shelf hardware loose, you can expand the shelf in and out. Place the shelf inside the vehicle and adjust as needed to reach the brackets installed on **step 1**.

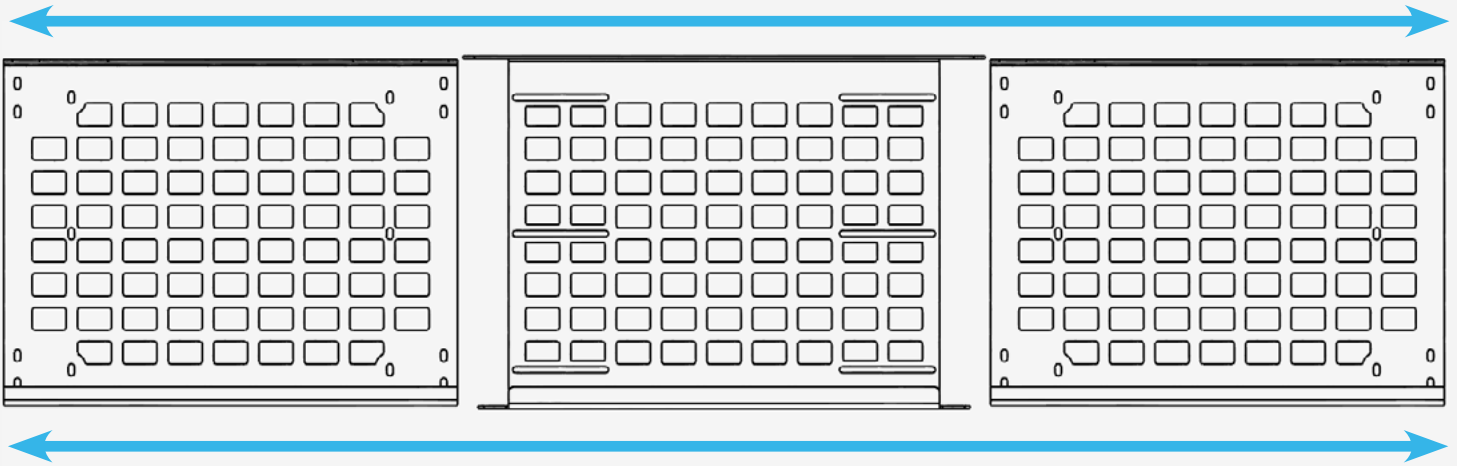

□ STEP 6

With the provided (A, A1, A2) 1/4" hardware, install the outer panels with the mounting brackets as shown below using a (5/32 allen) and a (7/16 wrench).

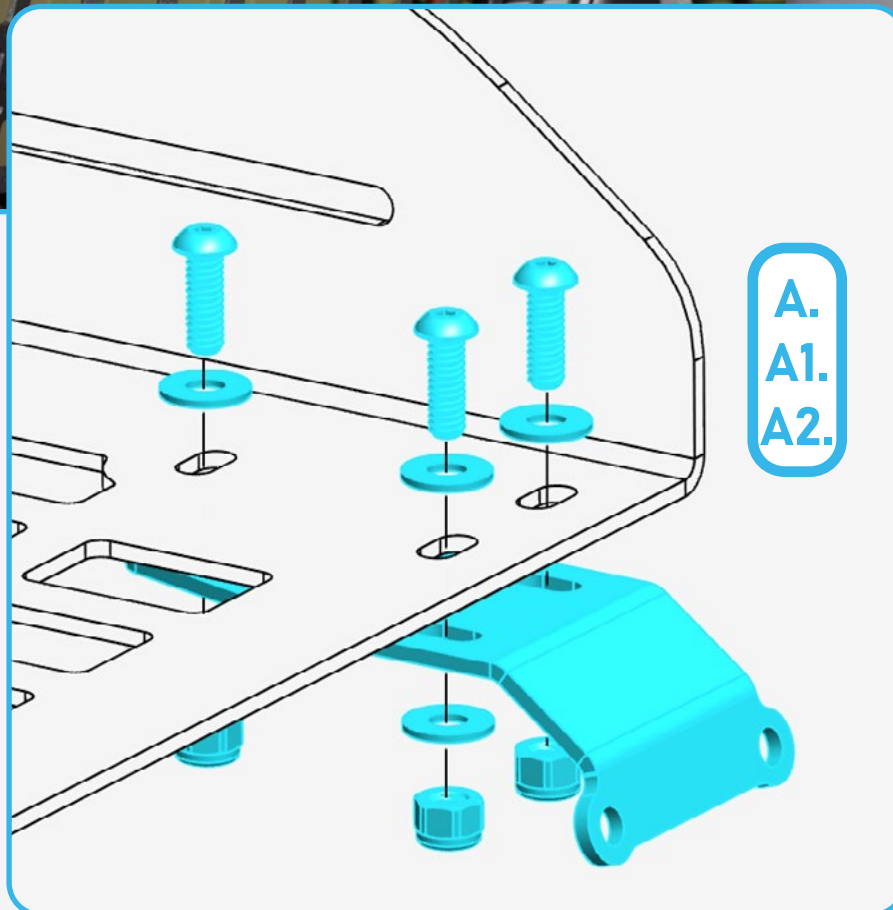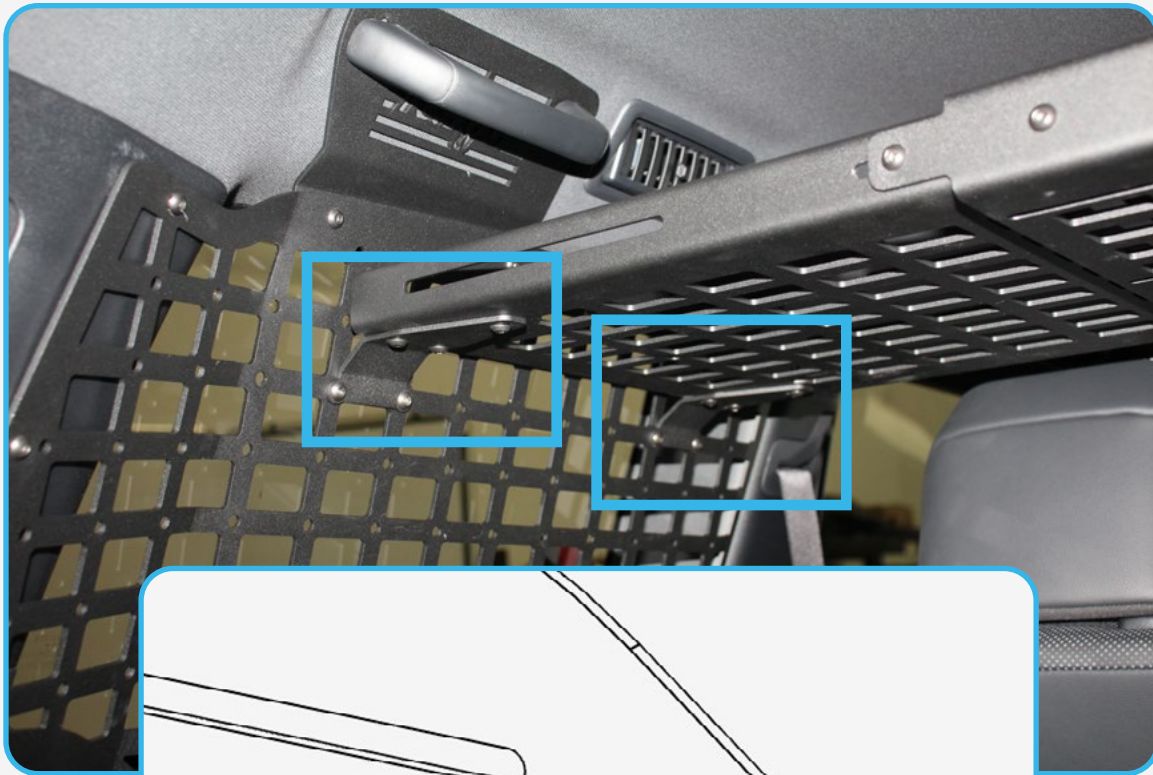

STEP 7

Stand back and enjoy your new RAGO Modular Storage Panel Shelf.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

