

E-MSP

2024/TOYOTA LAND CRUISER

AC7707601NA, AC7708201NA, AC7708301NA



TOOLS REQUIRED

- 7/16 wrench
- Phillips Screwdriver
- 5/32 Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 30 Minutes

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571

Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle.


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE

A.

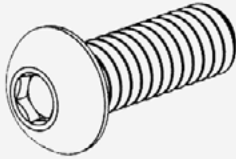

1/4-20 X 1/2" BUTTON HEAD

QTY: 12


B.



1/4" FLAT WASHER

QTY: 12

C.

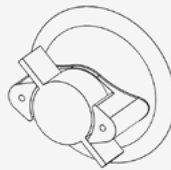

RAM SUCTION CUT


QTY: 4

Reference this page throughout the install



STEP 1

With the provided **(A, B)** 1/4 Hardware, Install the two panels as shown below using a (5/32 allen).

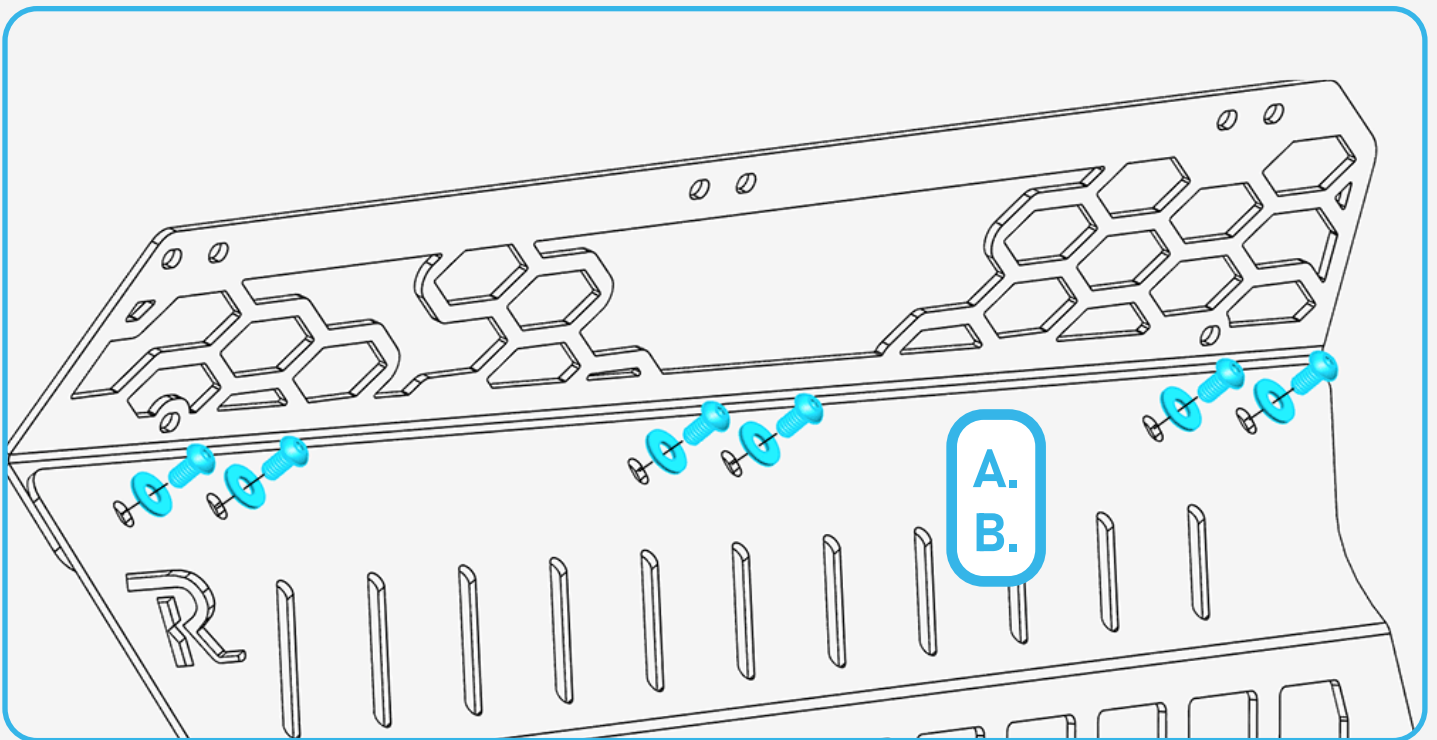

□ STEP 2

Install the provided (C) suction cups to the backside of the E-MSP with the hardware provided with the suction cups using a (Philips head screwdriver).



□ STEP 3

Install the E-MSP to the roof rack using the provided hardware that is already installed on the roof rack as shown below using a (5/32 allen) and a (7/16 wrench).



STEP 4

Stand back and enjoy your new RAGO E-MSP.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

